


Kolpin UTV Universal Stronghold™ Mount Kit

Product Installation Instructions

Part No: 30810

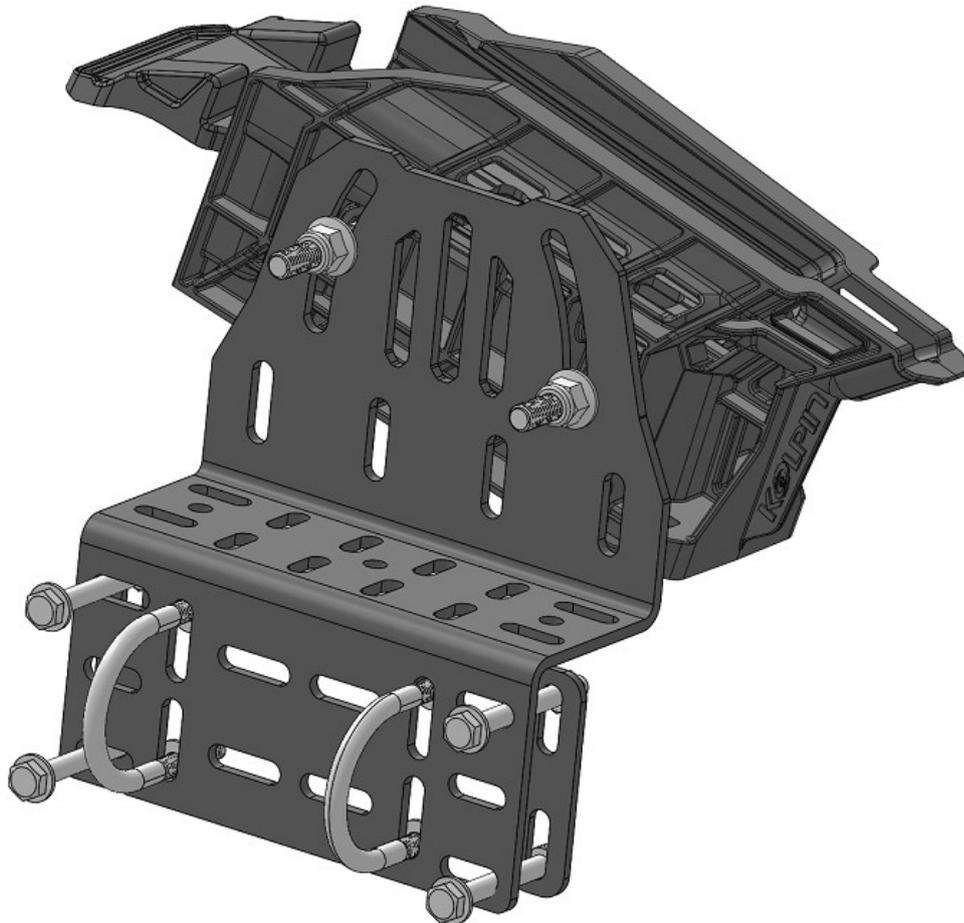

Kolpin Outdoors, Inc.


9955 59th Ave N, Plymouth, MN 55442

Phone #: (877) 956-5746 or (763) 478-5800

www.kolpin.com

customerservice@kolpin.com

Kit contents

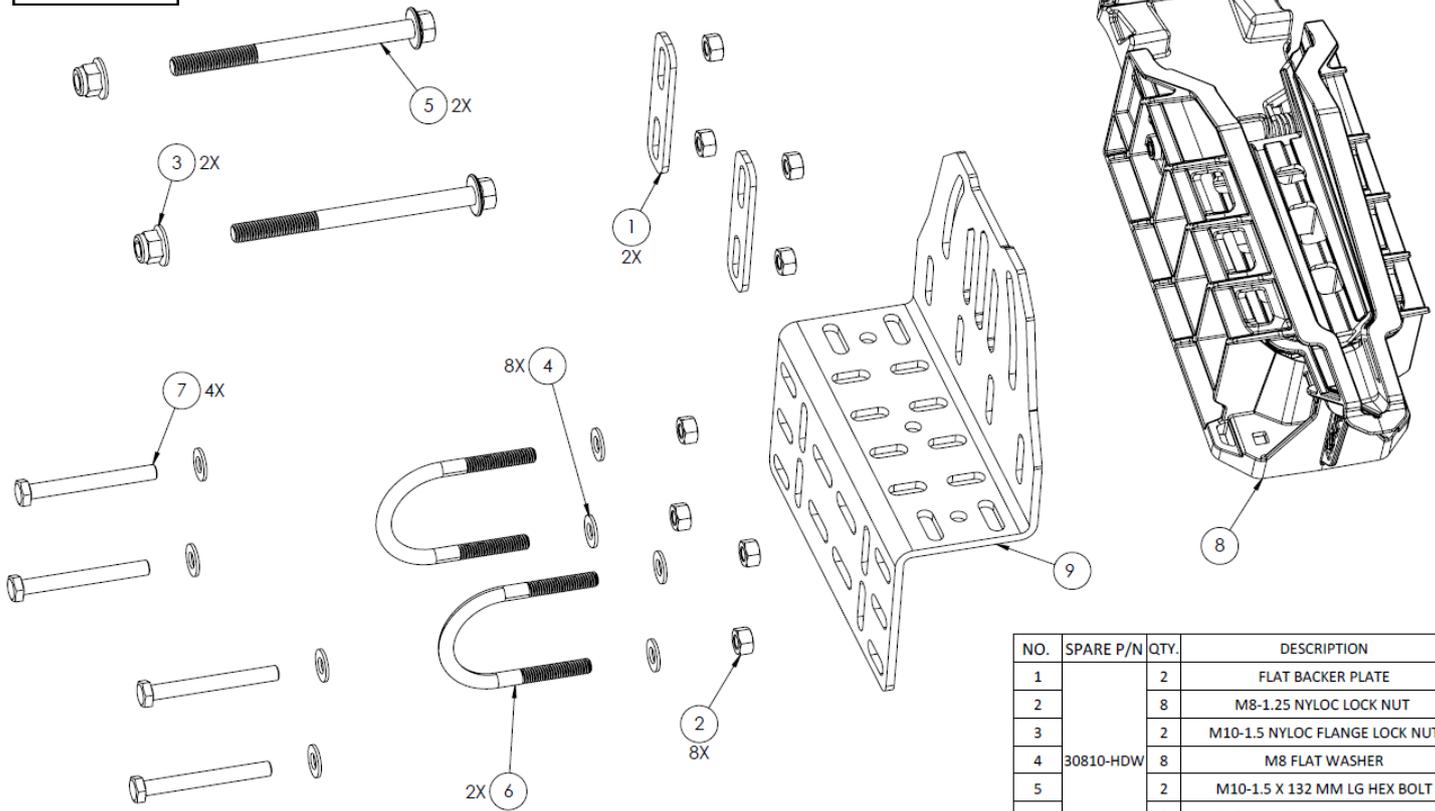

NO.	SPARE P/N	QTY.	DESCRIPTION
1		2	FLAT BACKER PLATE
2		8	M8-1.25 NYLOC LOCK NUT
3		2	M10-1.5 NYLOC FLANGE LOCK NUT
4	30810-HDW	8	M8 FLAT WASHER
5		2	M10-1.5 X 132 MM LG HEX BOLT
6		2	M8-1.25 X 76 MM X 51 MM U-BOLT
7		4	M8-1.25 X 70 MM LG HEX BOLT
8	KOL0710	1	BRACKET ASSEMBLY
9	KOL0813	1	BRACKET

Install Preparation:

1. Remove the bracket assembly (item 8) and mounting bracket (item 9) from packaging. Verify that the brackets are in good condition and that all the hardware is present.

Note: If any hardware is missing, do not return to the store. Call us to help, Toll Free 1-877-956-5746.

30810 Round Tube Roll Cage Mounting:

1. The Kolpin UTV Universal Stronghold™ mount kit can be installed on any vertical or horizontal roll cage round tube of diameters 1" - 2". Note, installation may be easier if certain items are removed from vehicle first.
2. Attach mounting bracket (item 9) to the roll cage of your UTV using the u-bolts (item 6), washers (item 4), and M8 nuts (item 2). The bracket can be mounted in many orientations depending on vehicle. (See Illustration 1-1). Note, do not tighten hardware at this time.

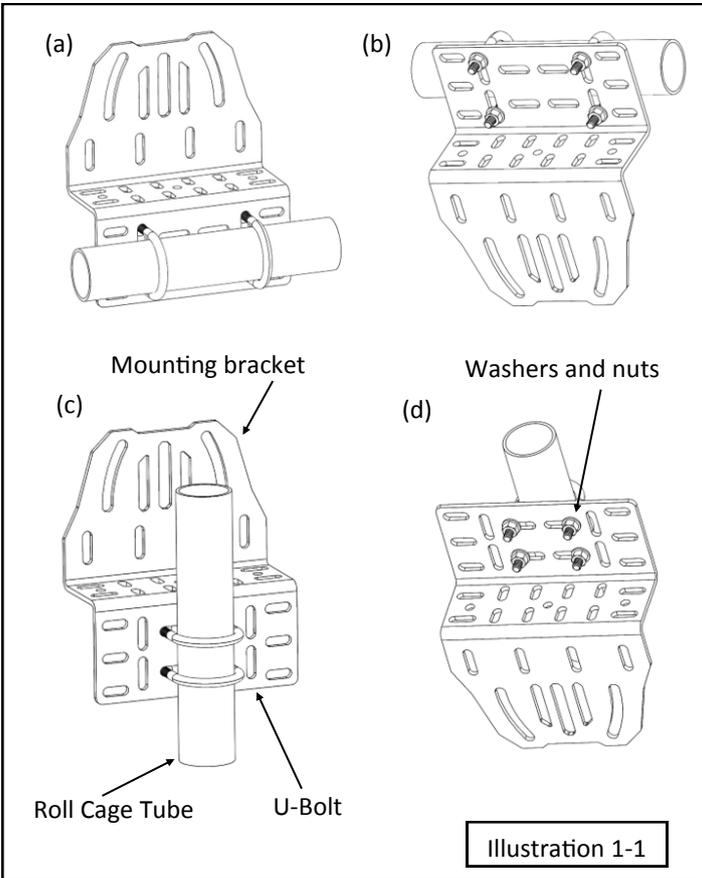




Illustration 1-1

30810 Round Tube Roll Cage Mounting (cont'd):

3. Position the bracket assembly (item 8) to the mounting bracket (item 9). Secure the bracket to the mount by using the two M10 bolts (item 5) and fasten with M10 nuts (item 3) as shown. The bracket can be adjusted to a specific angular position via the radial slots. (See Illustration 1-2). Once positions are selected, tighten all hardware.

WARNING: Do not over tighten hardware or damage can occur.

4. The bracket assembly (item 8) can be fastened to the mounting bracket (item 9) in many orientations as shown. (See Illustration 1-3).

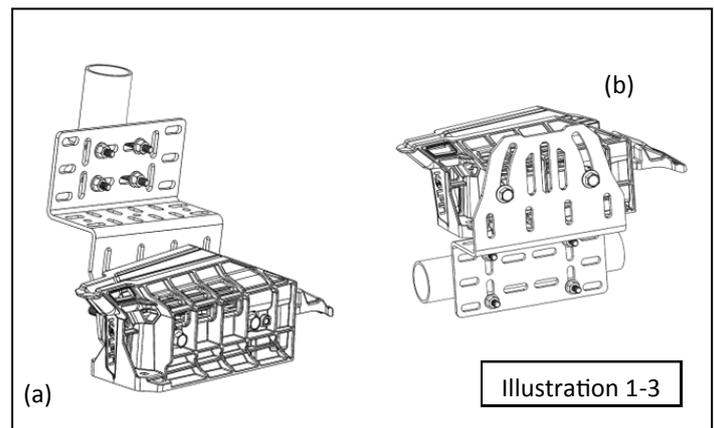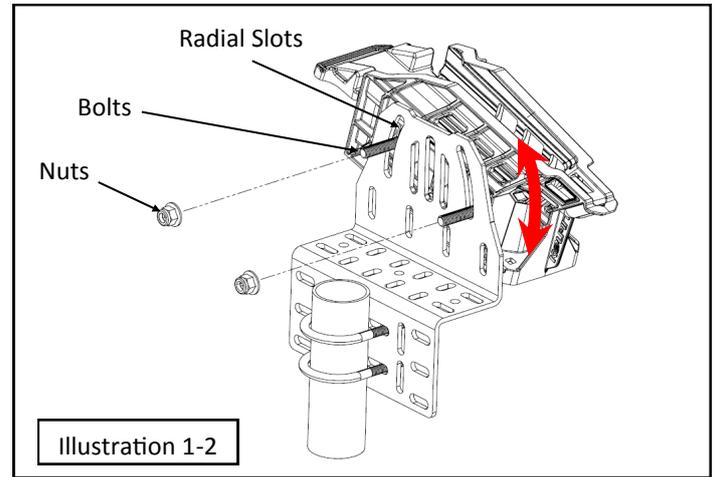


30810 Square Tube Roll Cage Mounting:

1. The Kolpin UTV Universal Stronghold™ mount kit can be installed on any vertical or horizontal roll cage square tube up to 2" x 2". *Note, installation may be easier if certain items are removed from vehicle first.*
2. Attach mounting bracket (item 9) to the roll cage of your UTV using the M8 hex bolts (item 7), flat backer plate (item 1), washers (item 4), and M8 nuts (item 2) provided. The bracket can be mounted in many orientations depending on vehicle. (See Illustration 2-1). *Note, do not tighten hardware at this time.*
3. Position the bracket assembly (item 8) to the mounting bracket (item 9). Secure the bracket to the mount by using the two M10 bolts (item 5) and fasten with M10 nuts (item 3) as shown. The bracket can be adjusted to a specific angular position via the radial slot. (See Illustration 1-2). Once positions are selected, tighten all hardware.


WARNING: Do not over tighten hardware or damage can occur.

4. The bracket assembly (item 8) can be fastened to the mounting bracket (item 9) in many orientations as shown. (See Illustration 1-3).

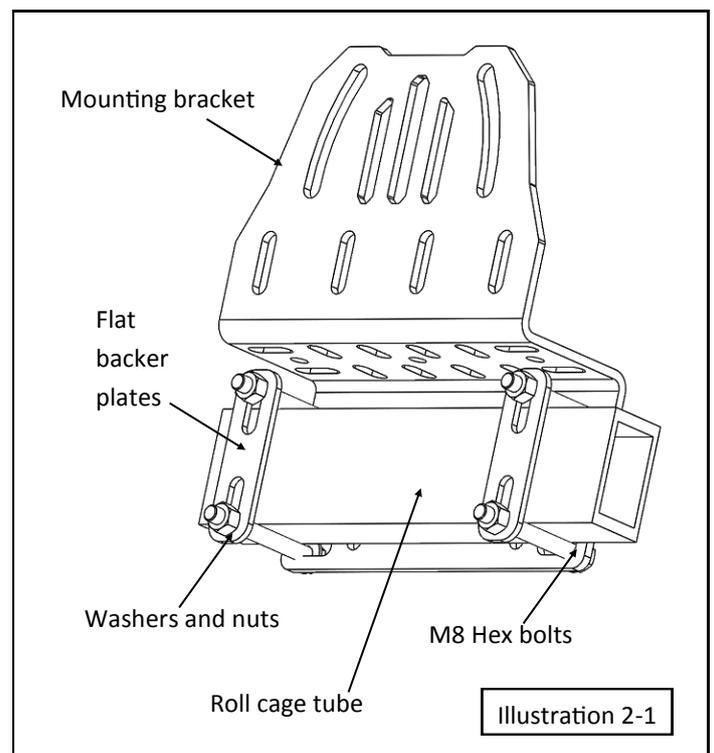

30810 Cargo Bed Side Mounting:

1. The Kolpin UTV Universal Stronghold™ mount kit can be installed on most vertical cargo bed sides. *Note, installation may be easier if certain items are removed from vehicle first.*
2. Position mounting bracket (item 9) onto the bed side of your cargo box of your UTV. Mark holes in locations to drill thru bed side and drill using a 3/8" drill bit (not provided). Use the M8 hex bolts (item 7), flat backer plate (item 1), washers (item 4), and M8 nuts (item 2) provided to fasten mounting bracket to bed side as shown. (See Illustration 3-1). *Note, do not tighten hardware at this time.*
3. Position the bracket assembly (item 8) to the mounting bracket (item 9). Secure the bracket to the mount by using the two M10 bolts (item 5) and fasten with M10 nuts (item 3) as shown. The bracket can be adjusted to a specific angular position via the radial slot. (See Illustration 1-2). Once positions are selected, tighten all hardware. *Note, bolt length may need to be trimmed.*


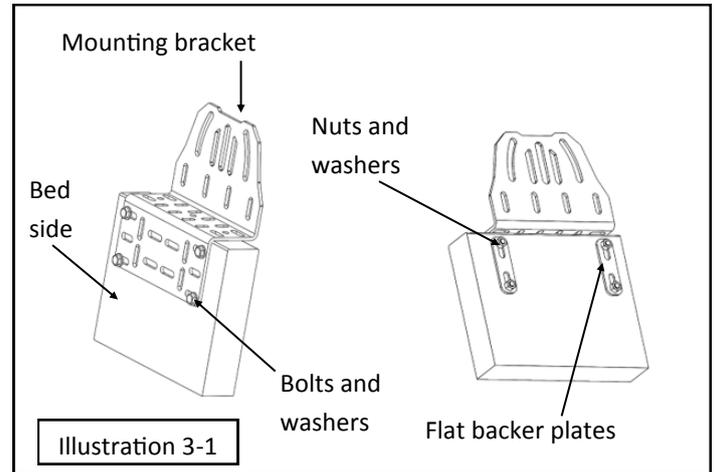


WARNING: Do not over tighten hardware or damage can occur.

4. The bracket assembly (item 8) can be fastened to the mounting bracket (item 9) in many orientations as shown. (See Illustration 1-3).

30810 Polaris UTV Lock & Ride Bed Mounting with Kolpin KXP UTV Plungers:


1. The Kolpin UTV Universal Stronghold™ mount kit will fit Polaris UTV beds with Lock & Ride features. Additional Kolpin accessories are required and not supplied with 30810 kit. Quantity (2) KXP Plunger-UTV (Kolpin p/n: 98510) will need to be purchased separately and can be found online www.kolpin.com/powersports/kxp-plunger-utv or can be obtained through Kolpin retailers and dealers. *Note, installation may be easier if certain items are removed from vehicle first.*
2. The Kolpin Stronghold™ mount kit can be installed in many mounting positions on your UTV bed.
3. Attach the two KXP Plunger-UTV (p/n: 98510) to the mounting bracket (item 9) as shown. (See Illustration 4-1a and 4-1b). *Note, do not tighten turn knobs at this step.*
4. Position and place the mounting bracket assembly into the UTV bed Lock & Ride holes as shown. Tighten the KXP turn knobs to secure the assembly to the bed. (See Illustration 4-2).
5. Position the bracket assembly (item 8) to the mounting bracket (item 9). Secure the bracket to the mount by using the two M10 bolts (item 5) and fasten with M10 nuts (item 3) as shown. The bracket can be adjusted to a specific angular position via the radial slot. (See Illustration 1-2). Once positions are selected, tighten all hardware. *Note, bolt length may need to be trimmed.*
6. The bracket assembly (item 8) can be fastened to the mounting bracket (item 9) in many orientations as shown. (See Illustration 1-3).

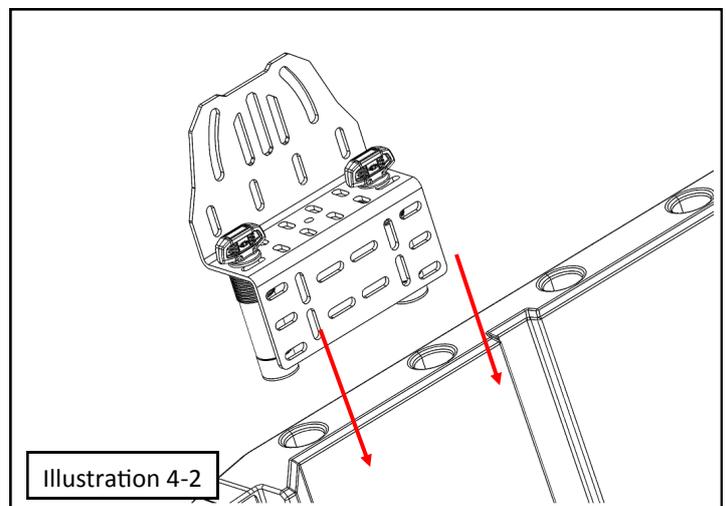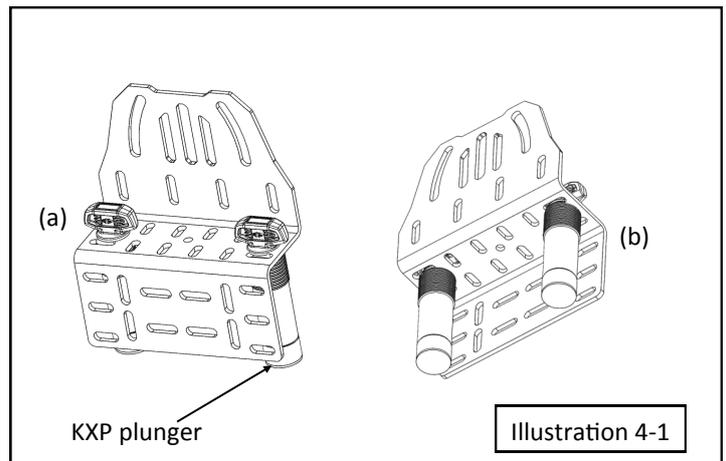

30810 Flat Surface Mounting:

1. The Kolpin UTV Universal Stronghold™ mount kit can be installed on any drillable flat surface using the bracket assembly (item 8) by itself.
2. Position bracket assembly (item 1) on flat surface and mark where holes can be drilled. Drill holes into flat surface and thru. Insert bolts with washers (not provided) thru the holes in bracket assembly (item 8) and fasten with nuts (not provided). Tighten securely. (See Illustration 5-1).

WARNING: Do not over tighten hardware or damage can occur.

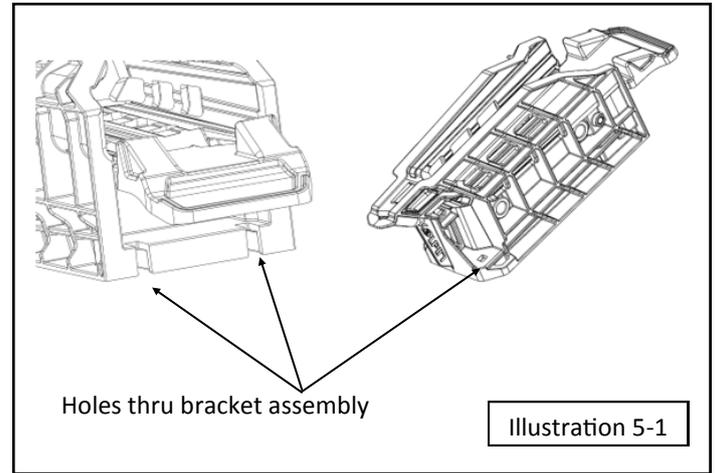

NOTE: Extra hardware is provided for multiple mounting applications.

WARNING: Make sure the Kolpin Gun Boot does not extend below or outside the vehicle frame as severe damage could result to your firearm inside if obstructions are encountered.

CAUTION: Never install the mounting bracket in a position that will allow the firearm inside the Gun Boot to face the operator and/or passengers.

CAUTION: Always make sure your firearm is unloaded before placing it in your Gun Boot.

For additional assistance, please contact Kolpin customer service department at (877) 956-5746 or (763) 478-5800 or email customerservice@kolpin.com